

Gear Shift Knob Installation Instructions

Place column shift knob onto the shift lever. Once the lever is in place, use setscrew (provided) and adjust knob so set screw is pointing away from you, tighten setscrew. Do not remove the upper shift lever for any reason! The tension spring will pop out and it is very difficult to re-install.



Standard style knob pictured

Set Screw



ididitinc.com