

Grant Tuff Grip Steering Wheel to an ididit Adaptor

For Part Number's 2611010010

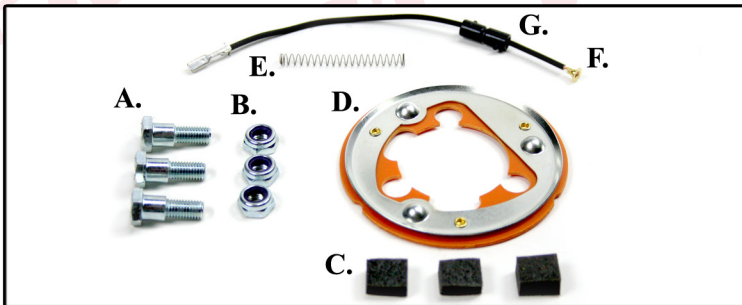


Figure 1

Kit includes:

- A- 3 Speciality Bolts
- B- 3 Nylock Nuts
- C- 3 Foam Bumpers
- D- 1 Contact Plate
- E- 1 Spring
- F- 1 Horn Wire
- G- 1 Horn Catch

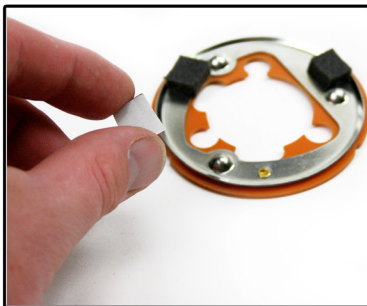


Figure 2

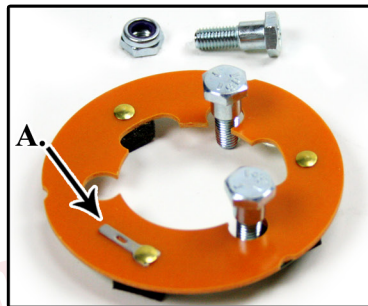


Figure 3

Installation Instructions:

1. Attach the three foam pads to the metal rivet of the contact plate. (Figure 2)
2. Attach the contact plate onto the steering wheel with the metal side face down. Install the bolts and Nylock nuts that are provided and Torque to 11 ft. lbs. (Figure 3)
3. On the adaptor, there is a hole that is in the 10:30 position. This is where the horn wire will be installed. Install the spring, wire and connector into the hole and gently turn it a 1/8 turn to the right (clockwise). (Figure 4 & 5)
4. Install the steering wheel with the provided bolts onto the adaptor. Then feed the horn wire up through the back of the wheel so the wire can be attached to the front of the fiber plate on the terminal provided there. (Figure 3 A.)
5. Install the metal cap over the fiber disk. This should snap over the disk when pushing it down. Next, install the plastic button over the metal cap by pushing it down. Your installation is now complete. (Figure 6)

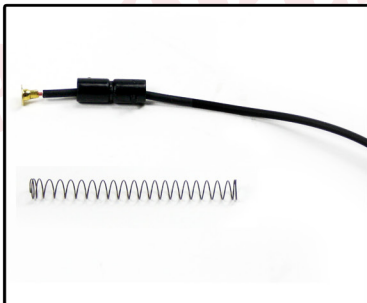


Figure 4

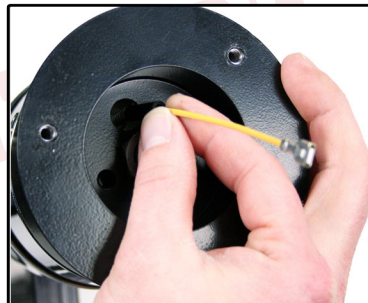


Figure 5



Figure 6



www.ididitinc.com

ididit 610 S. Maumee St. 49286 Tecumseh, MI • PH: 517-424-0577 • FAX: 517-424-7293